

# Air sterilization O<sup>3</sup> free

## GermiTube

*Application:*

- Hospitals
- Surgeries
- Schools, nurseries
- Offices
- Waiting rooms
- Authority offices
- Households
- and many others



## Futuro Lighting *design*

## Filter installation / change

2018

Rev.1.0

# GermiTube

## *GT190G Dust filter installation*



1. Remove old filter from bottom part of GermiTube, if presented.
2. Attach new dust filter to the bottom of Germitube, please note one side is longer, this one needs to go to the front or back.
3. if you use Wizard to reconfigure Germitube settings, please note filter throughput shown on filter pack.

Note: used filter can be cleaned by vacuum cleaner, and reused, but filter color will remain dark.

# GermiTube

*Dust filter  
how looks dust filter after 2000h of operation, airflow 50%*




Note: GermiTube was installed in kids room  
We recommend to change filter after 1000 hours of operation for household installations, for "busy" areas, we strongly recommend to check filter status more frequently.

# GermiTube

Operation

*how looks GermiTube air channel, after 5400 hours of operation*

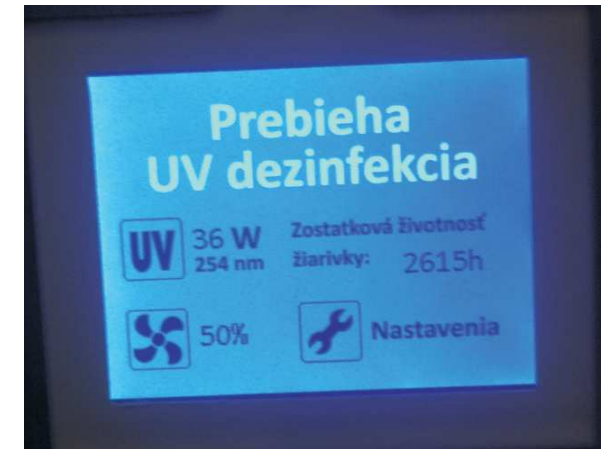

Note: GermiTube was installed in kids room, and whole time dust filter was used.

We recommend to clean air chamber, fan and tube after 3000 hours of operation. If dust filter is not used we recommend cleaning each 1000 hours of operation.

**End of document**